


## TEMPORARY PROTECTION FOR FLOORS AND STAIRS

SELF-ADHESIVE, ANTISLIP, WATERPROOF,  
REUSABLE - WITH FIRE CERTIFICATION

- PROTECTS against STAINS and ABSORBS SHOCK
- QUICK and EASY INSTALLATION thanks to SELF-ADHESIVE SIDE
- ANTISLIP: very good adhesion on PVC and dry floor tiles.
- Ideal for stairs
- WATERPROOF thanks to its TRANSPARENT plastic film
- WHITE COLOR which does not reflect light on walls (ideal for painting work) and allows good visibility of tools
- Use on PERFECTLY DRY FLOORS
- Not suitable for heated floors, porous floors, faience tiles and solid parquet floors

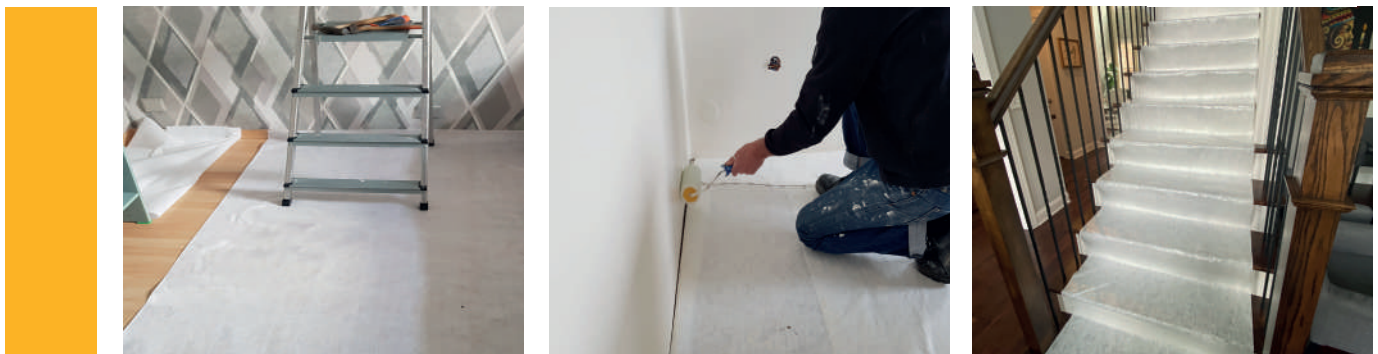

### TECHNICAL DATA

**Surface:** flat needlepunched protective textile

**Fibres:** polyster & recycled polyester

**Backing:** impregnated

**Total weight** 150 g/m<sup>2</sup> ± 10%

**Average thickness:** 1,05 mm (ISO 9073-2)



\* Information on emission of volatile substances in an interior, which represent a risk of inhalation on a scale starting from A+ (almost no emission) to C (high emission)

### REFERENCES

Dimensions	Weight	m <sup>2</sup>	Packaging	Sommer Codes	EAN Codes
1 x 25 m	± 4 kg	25	45 rolls → 1125 m <sup>2</sup>	RKCF2548	370037 9024115
1 x 50 m	± 8 kg	50	24 rolls → 1200 m <sup>2</sup>	RKCF5024	370037 9024122

### SOMMER NEEDLEPUNCH

341, rue de la Mairie  
59780 BAISIEUX - France

+33 (0)3 20 64 46 60  
commandes@sommernp.com  
www.sommernp.com



**TEMPORARY PROTECTION FOR FLOORS AND STAIRS****SELF-ADHESIVE, ANTISLIP, WATERPROOF,  
REUSABLE - WITH FIRE CERTIFICATION****PRECAUTION FOR USE**

- Do not expose to the sun
- Do not combine solvents with the use of Cover'N Go
- Do not exert permanent pressure of more than 100kg/m<sup>2</sup> for more than 24 hours
- Use the Cover'N Go within 6 months of receipt.
- Before installation, let your floor dry for at least 72 hours.
- Duration of installation: 1 month maximum.
- Test the suitability of the product in a less visible place beforehand.

In the rare event that glue deposits remain on the floor, the manufacturer cannot be held responsible

In this case, pass warm water with a little mild household detergent (black soap for example...) on the surface concerned.

**INSTRUCTIONS**

- Stop underfloor heating before using the Cover'N Go
- Dust the surface to be protected
- 10°C < ambient temperature < 25°C
- Hygrometry < 60%